

TPM-R

! Important

Please read this manual before using TPM-R. Diagnosing software has not been installed yet. Start diagnosing after registering and updating.

! Warning

If Diagnosing icon is not displayed on the main menu, the software has not been installed. Please diagnose with the newest version after registering and updating. (Figure 1) Please unlock SD card switch when diagnosing or updating. (Figure 2) Please use TPM-R updating program with Window XP or newer.



(Figure 1)



(Figure 2)

TPM-R Packing list

Please make sure that this product package includes the following.

TPM-R base unit	OBDII cable	Cigar cable	Carrying case
SD card	SD card reader	Bluetooth adapter	Quick start guide


! Warning These items are subject to change without any notices.

Downloading the instruction manual

You can download the instruction manual with PDF file.


Step1

[TPM-R update] in start-up state, please click [Download user manual]

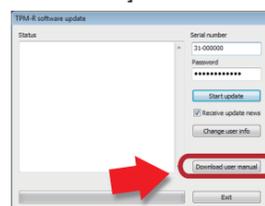


Step2

Downloading manual will start.

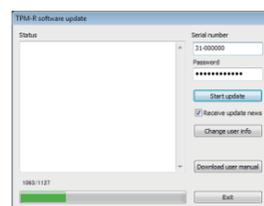


Step3

When the download is complete, please save the file as you wish.

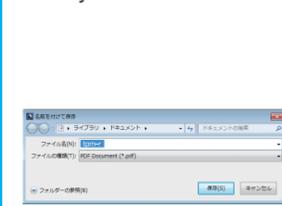

Step4

There is a file which you saved (From Step 3). Please double click and open the file.

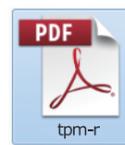


! Warning If you can not save the file, please try to change the location. If you can not see the file well, please use the latest version of Adobe(R)READER(R).

User registration

Step1

Please pull SD card from the base unit and connect to PC with SD card reader.

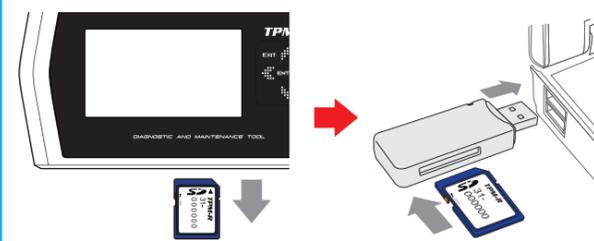


Step2

When PC recognizes SD card, auto play menu will display. And click open folder to view files. If auto play menu will not displayed, simply choose [My computer]-[Removable disk] and run [tpm-r.exe].




Step3

[TPM-R update] screen is on, please click [Change user info]. Please go to the next section after reading and understanding the privacy policy.

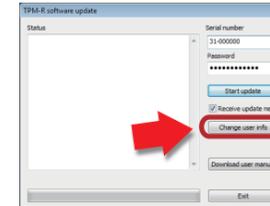


Step4

[User registration] screen is on, please fill out all boxes and click [Send].

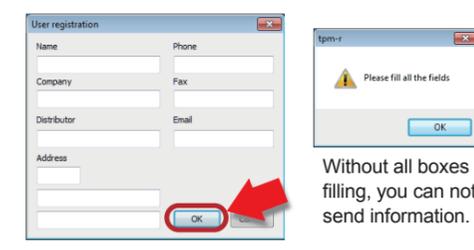

Step5

After sending information, this message comes and please check your email box.

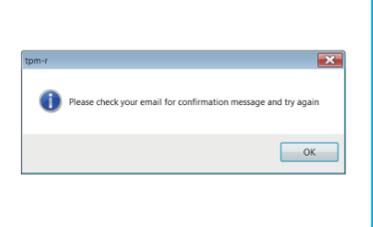


Step6

Please check your email. You should have email [scantool.jp registration email] from [admin@scantool.jp]. Please click the link

Your confirmation link
Please click this link to activate your tool
<http://www.scantool.jp/script/confirm.php?passkey=0ec232222c04e>
If the above address cannot be clicked, try copying and pasting the address on a new web browser window

Step7

After clicking the link, the serial number of your base unit and the valid date appears. (It is one year free updating since your registration date)

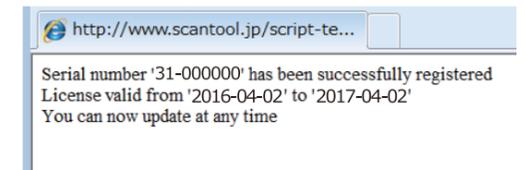


! Warning There is a lock switch on SD card. Please unlock and use. Due to your security software, it may block communication. In that case, you will need changing setting of your security software. In case, you do not receive email, possibility of wrong email address or checking junk emails. When the valid date is not showing on authentication screen, please check the registration email once more. You are supposed to get emails as many as you click the link so check the latest one you have received.

Update

Connecting SD card: Please check User registration Step 1 and Step 2

Step1

Please click [Start update] on [TPM-R update] screen.

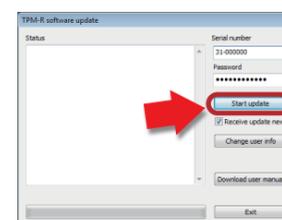


Step2

It will download and write into SD card.



Step3


Now [Update complete] showing: Please pull out SD card and diagnose.

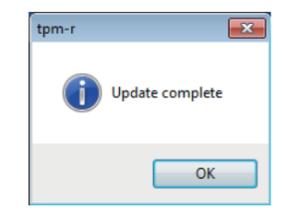


! Warning Although you download the update software, if it still shows with error message says [it can not overwrite], please check [Lock] switch. (Remove the switch of position [Lock] and [Unlock] for several times)

TPM-R Quick Start Guide

Parts name

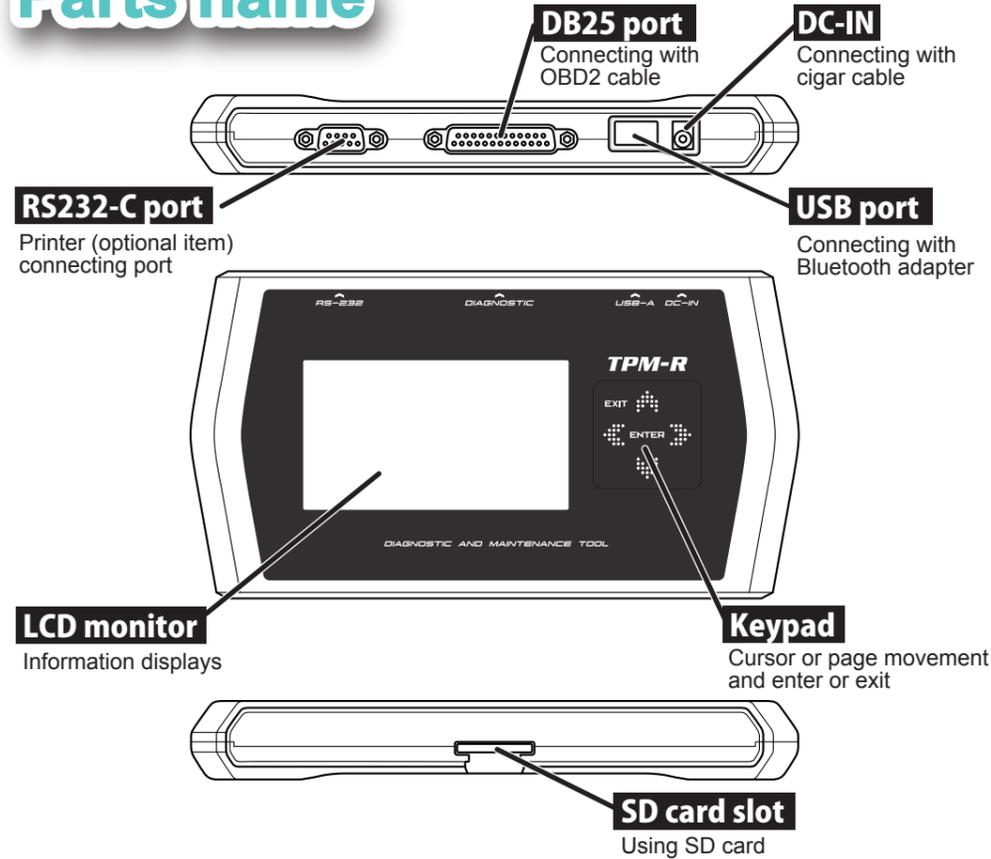

Screen description

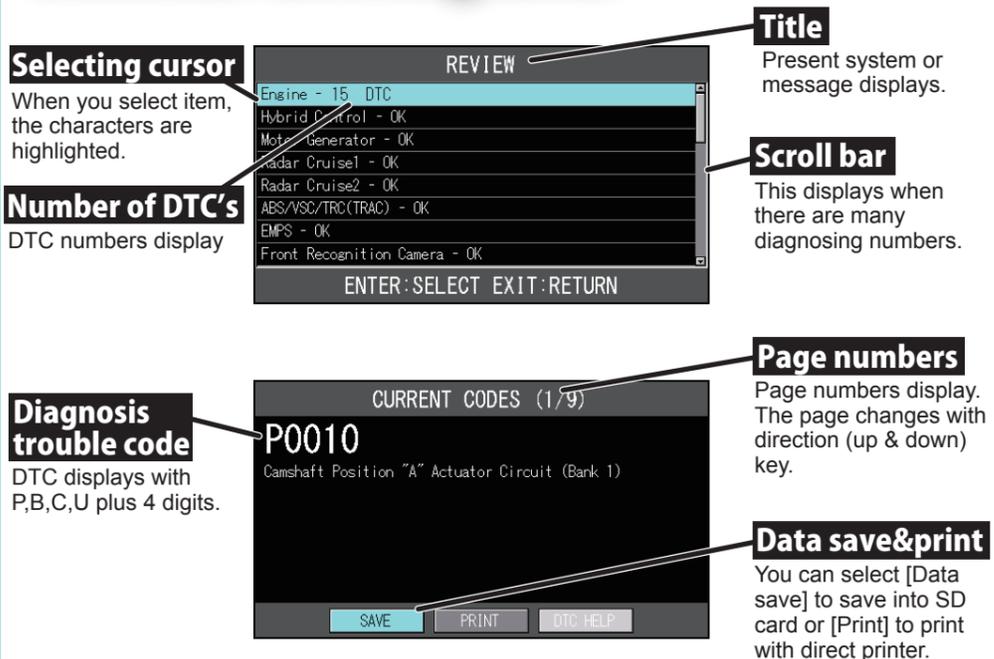


How to diagnosis

Please diagnose the vehicle with ignition key ON state.

How to diagnosis is the following

Step1

Please make sure your vehicle ignition is "OFF". And connect TPM-R to diagnosing connector, then turn ignition key "ON".

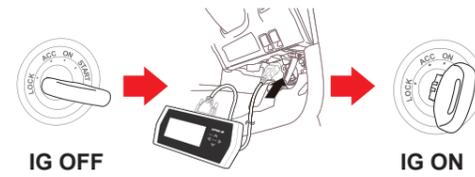

Step2

TPM-R main menu displays. Please select [Diagnosis] and [Enter].




Step3

Please select Domestic vehicle, Import, Truck or OBD and choose the car manufacture.



Step4

[Vehicle select] : [Autodetect] or [Manualselection] and [Enter]

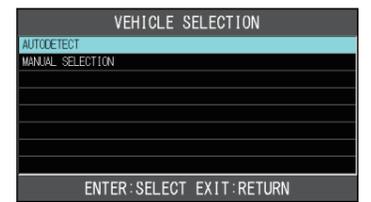

Step5

[Vehicle select]: [Brand] [Vehicle name] [Vehicle type] [Engine type] [Option]




Step6

[Main menu] displays. Please choose your demanding item and [Enter].



Step7

Selecting which you diagnose and push [Enter]. This sample screen is selected [Short Test].

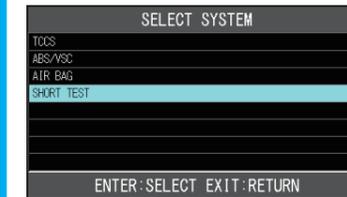

Step8

[Short Test] checks all systems that the vehicle carries.



Warning Please check the connector connection or ignition key ON when you have trouble with diagnosing.


Diagnosing result: Display, Print, Save & Erase

After result of diagnosing the vehicle, your steps are the following.

Please erase DTC when the vehicle's ignition key ON. If engine runs, some DTC's can not clear.

Review

Review shows whether there are any DTC's or not. Please select ECU and push [Enter] so you may check individual ECU and DTC.

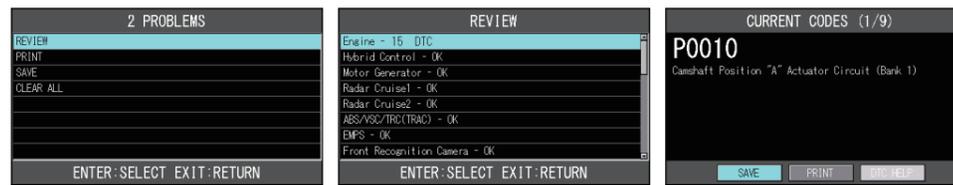

Print

[Print] and press [Enter] to print your result of diagnosing. Please turn on TPM-R exclusive use printer before pressing [Enter] key.



Data save

[Save] and press [Enter] can save your selecting data. You may find saving data file on [Reports] folder in SD card. Due to memory size of the files, it may not be able to save the data so please send the data to your PC every time.



Clear All

[Clear All] and press [Enter] to erase all trouble codes. TPM-R will erase all ECU code. When it is done, you see all ECU have been erased by looking the screen. When the trouble is there, existing, the code will not be able to erase without fixing. Please try to erase the code after repair the trouble.



Warning When you wish to finish diagnosing, please press [Exit] until [Maker select] and ignition OFF, disconnect TPM-R from the vehicle connector.